

ADDITIONAL BENEFITS

Roadside Assistance

You will receive 24/7 assistance with lockouts, tire changes, jump starts, fluid delivery and towing when you call toll free 877-578-3576.

Car Rental

You will receive rental car reimbursement for all qualified covered repairs.*

Trip Interruption

If you are away from home and your vehicle has a mechanical breakdown that is covered, we will reimburse you for meals and lodging.*

Transferability

If you sell your vehicle with coverage remaining, you can transfer the coverage to the next owner.*

Disappearing Deductible

If you select the Disappearing Deductible option you will not have to pay a deductible if you return to the dealer who sold you our contract for repairs.*


*Refer to your contract for specific information.



PROTECTION

With a Vehicle Service Contract from Liberty Shield, you are protected against unexpected repair costs that may result in significant out-of-pocket expenses. With today's advanced technology, repairs can be costly and are often unpredictable. You'll rest easy knowing that your vehicle will have coverage anywhere in the USA.

COST OF UNEXPECTED REPAIRS

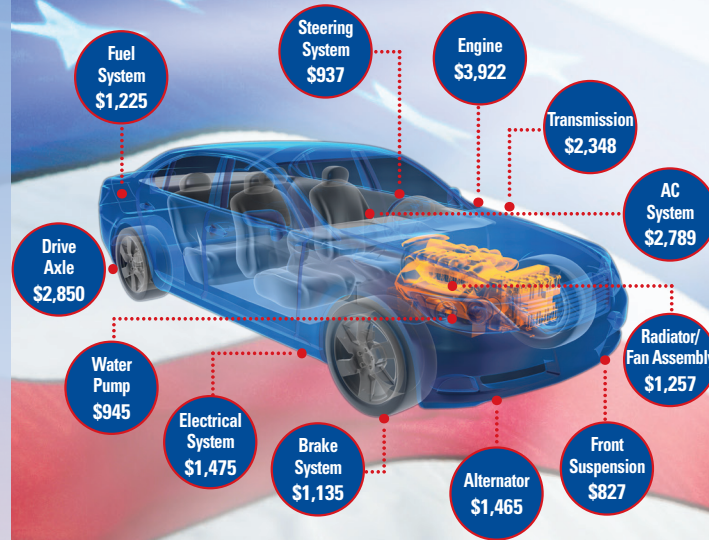

**LIBERTY
SHIELD**™

www.libertyautousa.com
833-771-0301

This brochure is not a service contract. It is an outline of the Liberty Shield Vehicle Service Contract. See your contract for exact terms, coverages and exclusions.

Your Administrator/Obligor under this plan is CARS Protection Plus, Inc./ Florida CARS Protection Plus, Inc., (Florida License No. 32409). See your contract for more information.

© 2020 LIBERTY SHIELD



**LIBERTY
SHIELD**™

EXTENDED VEHICLE SERVICE CONTRACT



**MECHANICAL BREAKDOWN
COVERAGE FOR YOUR
PROTECTION**

LEVEL 1 - POWERTRAIN PLUS

Engine

- Cylinder Block
- Cylinder Head
- Timing Case/Cover
- Timing Chain
- Timing Belt
- Tensioners
- Gears
- Sprockets
- Guides
- Serpentine Belt Tensioner
- Vibration Damper
- Oil Pump
- Intake Manifold
- Flywheel with Starter Ring Gear
- Core Plugs
- Valve Covers
- Oil Pan
- Turbocharger
- Supercharger & Internal Parts
- Wastegate Actuator
- Oxygen Sensor
- Mass Air Flow Sensor
- EGR Valve
- Crank Sensor
- Cam Sensor
- Seals and Gaskets

Engine Cooling System

- Water Pump and Housing
- Fan Clutch
- Thermostat
- Radiator
- Heater Core & Recovery Tank

Automatic Transmission

- Case and Internal Parts
- Bell Housing
- Pan
- Torque Converter
- Drive/Flex Plate
- Range Switch
- Speed Sensors
- Pressure Sensors
- PRNDL Position Switch
- Control Module
- Valve Body
- Mechatronics Unit
- Conductor Plate
- Servo Assemblies
- Cooler

Manual Transmission

- Main Shaft
- Counter Shaft
- Gears

- Chain
- Input Shaft
- Hub Assemblies
- Synchronizers
- Shift Rails
- Shift Fork
- Bearings

Front Wheel Drive

- Transaxle Case
- Axle Shaft
- Constant Velocity Joints & Boots
- Differential Cover
- Transaxle Speed Sensors
- Transaxle Solenoid Assembly
- Transaxle Electronic Controller
- Wheel Bearings/Hub Assemblies

All Wheel Drive

- Power Transfer Unit
- Viscous Coupler
- Axle Housing
- Constant Velocity Joints & Boots
- Drive Shaft
- Axle Shaft
- Differential Carrier Assembly
- Output Ball Bearing
- Output Flange
- End Cover
- Overrunning Clutch
- Vacuum Motor
- Torque Tube
- Pinion Spacer & Shim
- Wheel Bearings/Hub Assemblies

Rear Wheel Drive

- Axle Housing
- Axle Shafts & Bearings
- Drive Shaft Assemblies
- Drive Shaft Center Bearings
- Universal Joints & Yokes
- Wheel Bearings/Hub Assemblies

Four- Wheel Drive

- Transfer Case
- Control Module
- Shift Mode Assembly
- Axle Housing
- Axle Shafts
- Drive Shaft & Assemblies
- Center Bearings
- Universal Joints
- 4 x 4 Hubs
- Yokes
- Wheel Bearings/Hub Assemblies
- Disconnect Housing Assembly

LEVEL 2 - COMPREHENSIVE

Suspension

- Upper & Lower Control Arms
- Upper & Lower Bushings
- Ball Joints
- Leaf Springs
- Air & Coil Springs

Steering Components

- Power Steering Pump
- Power Steering Motor
- Gear Box
- Rack & Pinion
- High Pressure Lines
- Steering Box & Rack & Pump Housing
- Power Window Motors/Regulators/Switches
- Power Seat Motors
- Power Seat Track Assembly
- Power Door Lock Actuators & Switches
- Power Trunk/Tailgate Actuator & Motor
- Power Sunroof Motor
- Convertible Top Lift Motor & Pump
- Power Mirror Motors
- Manually Operated Switches
- Ignition Control Module
- Cruise Control Assembly

Brake Components

- Power Brake Booster
- Master Cylinder
- Wheel Cylinders
- Calipers
- ABS Hydraulic Components
- Proportioning Valve
- ABS Wheel Speed Sensors
- ABS Control Mode

Electrical Components

- Starter Motor
- Solenoid
- Alternator/Mounting Bracket
- Voltage Regulator
- Wiper Motor Front & Rear
- Cooling Fan Motor
- Distributor
- Ignition Coils

- Power Window Motors/Regulators/Switches
- Power Seat Motors
- Power Seat Track Assembly
- Power Door Lock Actuators & Switches
- Power Trunk/Tailgate Actuator & Motor
- Power Sunroof Motor
- Convertible Top Lift Motor & Pump
- Power Mirror Motors
- Manually Operated Switches
- Ignition Control Module
- Cruise Control Assembly

Air Conditioning & Refrigerant

- Compressor
- Clutch
- Pulley
- Mounting Bracket
- Condenser
- Accumulator/Receiver Drier
- Evaporator
- Refrigerant

Fuel

- Fuel Pump
- Fuel Injectors
- Injection Control Module
- Lift Pump
- Transfer Pump
- MAP/Air Charge Temperature Sensor
- Intake Manifold Pressure Sensor
- Throttle Position Sensor

LEVEL 3 - EXCLUSIONARY

Almost Everything

- Nearly all factory-equipped mechanical and electronic components are covered. Check your contract for exclusions.

Fuel

- Fuel Sender Assembly
- Waste Gate
- Intercooler
- Supercharger Pulley
- Pressure Regulator
- Fuel Tank
- Accelerator Pedal Assembly

Interior Climate & Comfort

- Idler Pulleys & Bearings
- Serpentine Belt Tensioner
- Expansion Valve
- Orifice Tube
- AC Pressure Switches
- Blower Motor & Fan
- Heater Core
- Heater Control Valve
- Control Cables
- Ducts
- Plenum Doors
- Blower Motor Resistor
- Condenser Cooling Fan Motor
- Manual Climate Control Head
- Metal Lines

Accessories

- Heated Seat Grids
- Rear Window Defogger/Defroster
- Memory Seat Motors/Switches/Sensors/Module
- Memory Steering Motors/Switches/Module

Body Hardware

- Hood & Trunk Latches & Cables
- Hood & Trunk Hinges
- Hood & Trunk Springs & Torsion Bars
- Hood & Trunk Hydraulic Lift Supports
- Door Hinges
- Door Handles
- Glovebox Assembly
- Ignition Lock Assembly
- Door Jam Switches
- Seat Track Assembly

Electrical Components

- Electronic Control Module (ECM)/Computer
- Horn & Horn Relay

TECH-SHIELD OPTION

- Head Unit
- Display
- LCD Screen
- DVD/Blu-ray Player
- GPS/Navigation
- Radio/CD Player
- Rearview Back-up Camera
- Bluetooth Connectivity
- Phone Communication Systems
- Alarm Systems
- Keyless Entry Transmitter & Receiver
- Early Collision Detection System
- Self Park Assist System
- Tire Pressure Monitoring System
- Cruise Control
- Instrument Cluster
- Speedometer
- Odometer
- Fuel Gauge
- Tachometer
- Volt & Amp Gauge
- Temperature Gauge

ECO-SHIELD OPTION

- Spark Plug Wires
- Coil to Spark Plug Boots & Connectors
- Vapor Canisters
- Emission Canisters
- Positive Crankcase Ventilation Valve
- Distributor Cap & Rotor
- PCV Valve
- Gas Cap
- Smog Pumps
- Catalytic Converter
- Muffler
- Exhaust Pipes
- High-Voltage Drive Batteries



LIBERTY
SHIELD™